

Compumotor

IFX Indexer User Guide

Compumotor Division
Parker Hannifin Corporation
p/n 88-007725-01



Table Of Contents

Chapter 1. Introduction	1
1.1. Description	1
1.2. Connection	1
1.3. Configuration and Specifications	5
1.3.1. Specifications	5
1.3.1.1. I/O Specifications	5
1.3.1.3. Memory Specifications	5
1.3.1.4. Environmental Specifications	6
1.3.2. RS232 Setup	6
1.3.3. Setting Device Address	6
Chapter 2. Operation	8
2.1. Limit Input	8
2.1.1. CW and CCW End of Travel Limit Inputs	9
2.1.2. The Home Limit Input	9
2.2. Trigger Inputs	10
2.3. Using Sequences	11
2.4. Output #1 & Output #2	13
2.5. Opto +.	13
Chapter 3. Closed Loop Operation (Encoder Operation)	14
3.1. Encoder Operation	14
3.2. Hardware Installation	14
3.3. Selecting Encoder Resolution Values	14
3.4. Testing Encoder Installation	15
3.4.1. Testing Encoder Resolution	15
3.4.2. Testing The Stop On Stall Function	16
Chapter 4. Programming	18
4.1. Command Attributes	18
4.2. Three wire interface	18
4.3. RS232 Daisy Chaining	19
4.3.1. Tips and Hints	20
4.4. Sequence Programming	22
4.5. Power on sequence execution	23
4.5.1. Normal mode: XP0	23
4.5.2. Single run: XP1-7	24
4.5.3. Continuous Run: XP9	24
4.5.4. Miscellaneous	24
4.6. Command Groups	24
4.6.1. Parameter Commands	25
4.6.2. Execute Commands	27
4.6.2.1. Notes on velocity profiling mode:	27
4.6.2.2. Using The Execute Commands	28
4.6.3. Sequence Commands	29
4.6.4. Status Commands	31
4.6.4.1. I/O Status Requests	32
4.6.4.2. Sequence Status Requests	32

Table Of Contents
Continued

Chapter 5. Command Language 33
 5.1. Command List 33

Appendix A: Jumper Settings 73

Appendix B: Pinout List 74

Appendix C: Wiring Diagrams 76

Appendix D: Default Values 78

Appendix E: Dimensional Drawings 80

Appendix F: Command Summary/Index 81

List Of Tables

Table 1-1: Communication and I/O Connections - TB1 . . .	2
Table 1-2: Encoder Interface Connections - (TB2)	2
Table 1-3: Motor Driver Output Connection - (J3)	3
Table 1-4: Power Supply Connection - (TB3)	3
Table 1-5: Baud Rate Jumper Settings	6
Table 1-6: Device Address Jumper Settings	6
Table 1-7: Sequence Select Inputs	12
Table D-1 European Default Values (Model IFX-E)	78
Table D-2 American Default Values (Model IFX)	78

List Of Figures

Figure 1-1: Connector Location and Auxiliary Board	
Dimensions	1
Figure 1-2: Side View - Auxiliary Board	2
Figure 1-4: Jumper Location	7
Figure 2-1: Limit Switch Connections	9
Figure 2-2: Trigger Input Connections	10
Figure 3-1: Typical Encoder Input Circuit	15
Figure 4-1: Multi-Axis Wiring	21