

Compumotor

Model 1830 Indexer User Guide

Compumotor Division
Parker Hannifin Corporation
p/n 88-005079-01 A

COMPUMOTOR CORPORATION

Model 1830 Motor Controller Operator's Manual

<u>Table of Contents</u>	<u>Page</u>
Description	1
Inspection and Warranty Information	2
Functional Check	3
Installation	5
A. Configuration Switches	5
1. VMEbus interrupts	5
2. VMEbus addressing	6
3. Limit switch switches	7
B. Limit Switch Inputs	8
C. Open-Loop Home Position Sensor	9
D. Encoder (if used)	10
E. Earth Grounding	10
Operation	11
A. Introduction	11
B. Connecting the Motor	11
C. Remote Power Shutdown	13
D. Trigger Inputs	13
E. Programmable Outputs	16
F. Jog Inputs	16
G. External Frequency Input	18
H. Encoder Interface	18
1. Electrical considerations	19
2. Encoder resolution (lines)	19
3. Usable encoder resolution	20
4. Encoder hookup (Compumotor)	21
5. Encoder hookup (non-Compumotor)	21
Programming	24
A. Languages	24
B. Reading and Writing	24
1. Writing commands to the 1830	25
2. Reading responses from the 1830	28
3. Command responses	31
C. Control and Status Bytes	31
1. The Control Byte	31
2. The Status Byte	32
D. Interrupts	33
Some interrupt programming tips	35

E.	Command Modes	37
	1. Programming modes	37
	a. Indexer mode	38
	b. Velocity-Streaming mode	39
	Bogus velocity values	41
	2. Command attributes	43
	3. Explanation of the attributes	43
F.	Command Language Syntax	44
G.	Advanced Features	45
	1. Pre-defined moves	45
	2. Sequence buffers	46
	3. Move zero	47
H.	Kinds of Commands	48
	Specifications	56
Appendix A:	Command Description	65
Appendix B:	Configuration Switches	156
Appendix C:	Connector Listing	158
Appendix D:	Drawings for Interfacing	162