
Index

- "\$" prompt 91
- AC power specification 33
- Address switch location 25
- Amplifiers specification 33

- Bipolar rating 12
- Buffer Capacity 72
- Buffered Commands 72
- Bulkhead connections 9

- Cabinet connections 9
- Case dimensions 25
- Checksum 90
- Command buffer 73
- Communications protocol 49
- Computer host mode 71
- Connector pin-outs 20
- Connectors (front panel) 18
- Controller operating range 34
- Controller resolution ranges 34
- Cooling considerations 26
- Current output specification 33
- Current setting switch 27

- Dead Band Window 45
- Default values 49
- Drive end connections 10
- Drive Maintenance 99
- Dump option 12
- Dump option calculations 12
- DW command 45

- Echoback 53
- Electrostatic precautions 9
- Enclosure Considerations 25
- Encoder following 42
- Encoder selection for
 - Position Maintenance 44
 - Environment specification 33
 - Environmental 26
 - External encoder D-connector 18

- Fault LED 99
- Ferrite absorber kit 3
- Ferrite absorber specifications 11
- Ferrite absorbers installation 11
- FSC command 45

- Handshaking 49
- Human interactive mode 71

- Identification of drive type 3
- Immediate Commands 72
- Input circuit 85
- Input circuit conventions 22
- Installation Considerations 26

- Loop Commands 76

- Main I/O connector 18
- Maintenance 99
- Motor current (optimum) 12
- Motor end connections 10
- Motor Fails to Move 100
- Motor is Jerky or Weak 101
- Motor Leads 13
- Motor Maintenance 99
- Motor Overheats 101
- Motor selection 12
- Motor specification 33
- Motor Stalls 101
- Motor wiring EMC requirements 9
- MV command 45

- Non-volatile RAM 90
- NPN Outputs 24

- OEM Motor drive 17
- Output on stall 46
- Overheating 101

- Parallel connection of motors 15
- Pause Commands 78
- PNP Outputs 24
- Position Maintenance 44
- Position Maintenance application 45
- Position Maintenance correction velocity 45
- Power connections 9
- Pre-installation test 4
- Preset following index mode 42, 44
- Primary encoder D-connector 18
- Product description 1
- Program storage 34
- Programmable output 88

- QM Motor drive settings 16

- Registration 38
- Returning the System 103
- Reverse motor direction 101
- Roller slippage correction 45
- RS232 connections (getting started) 4
- RS232/RP240 mini-DIN socket 18
- RS232/RS485 D-connector 18

- S Motor drive settings 16
- Selftest selection switch 27
- Sequence 90
- Sequence buffer 73
- Sequence buffers 90
- Sequence identifiers 90
- Sequence selection 92
- Sequence selection example 92
- Series connection of motors 14
- Setting up 26
- Ship kit 3
- Signal type A inputs 22
- Signal type B outputs 23
- Signal type C inputs 24
- Signal type D inputs 24
- Signal type E inputs 24
- Signal type F inputs 24
- Signal type G inputs 24
- Signal type I inputs 25
- Signal type J inputs 25
- Signal types 22
- Software Scaling 42
- Specification 34
- Specification 33
- Stall Detect 46
- Stalling 101
- Standby selection switch 27
- Status Request Commands 78
- Step resolution switch 27
- Stop Move Commands 77
- Stop on stall 46
- Switch Settings 26

- Temperature, operating 26
- Temperature, storage 26
- Test circuit 5
- Test configuration (pre-installation) 4
- Test connections 6
- Testing the PDHX-E 6
- Thumbwheel interface 28
- TM8 (Dual) example 31
- TM8 Example 29
- TM8 Thumbwheel 28
- Troubleshooting 99

- Unipolar rating 12

- Write-protect sequences 91

- XON, XOFF 49

